 
 

 





Assembly Instructions




RECEPTION COUNTER

Model No. AVA-RCCH110-200
AVA-RCCH110-240


HARDWARE LIST

| | | | |
|---|---|---|--|
| A  LEX-RCB-AXXX 1 Set | B  S-RBC-A 2 Pcs | C  S-PHM-M6X16 34 Pcs | D  MF-SBOLT-JT-10259 34 Pcs |
| H  MF-DBOLT-786 3 Pcs | I  S-PHS-#10X3/4 8 Pcs | J  BK-4H-80X60X3 2 Pcs | |

 
TOOLS REQUIRED

| | |
|--|--|
|  Hand Drill |  Screwdriver |
|  Allen Key 4mm | |

 
STEP1

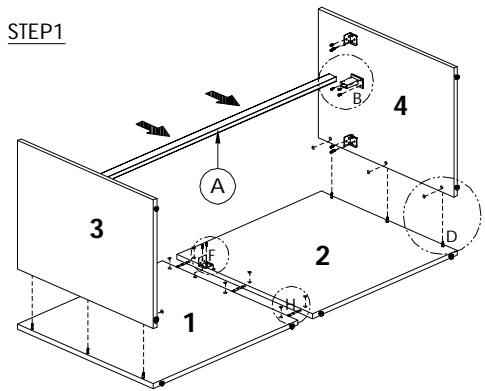

 
STEP2

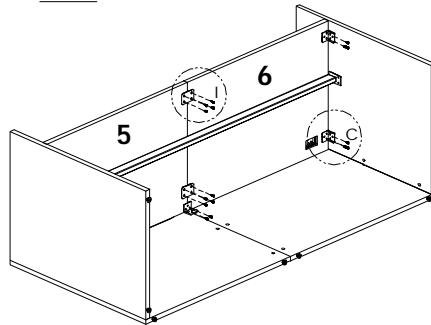

 
STEP3

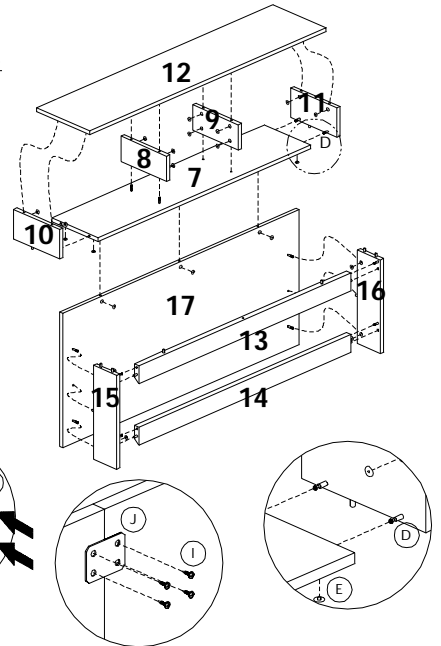


 
STEP4

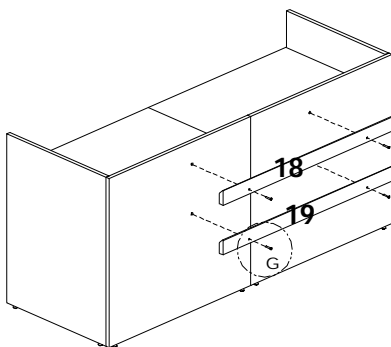

 STEP5

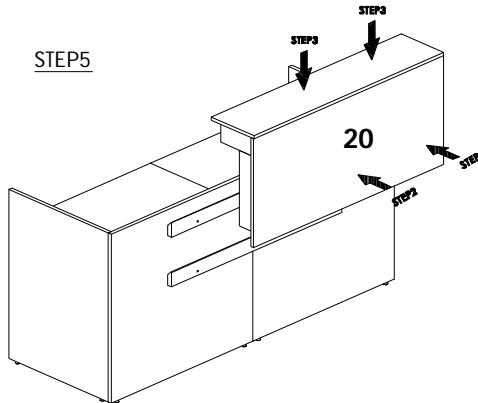

COMPLETED ASSEMBLY

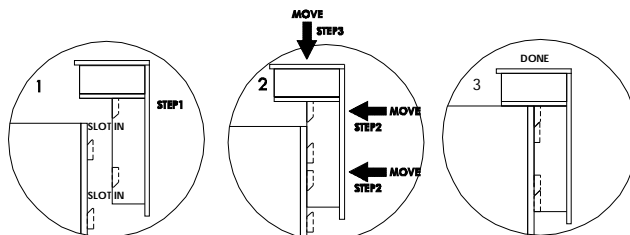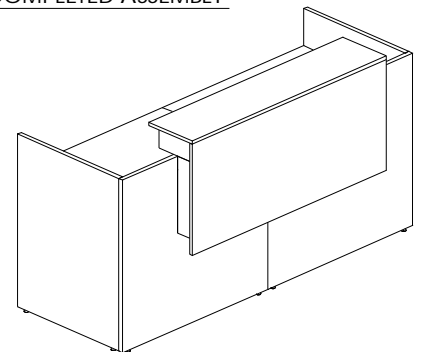  


IMPORTANT NOTE:

- 1) Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- 2) Check to be sure that you have all parts and hardware.
- 3) Remove all wrapping materials, including staples & packing straps before you start to assemble.
- 4) Keep all hardware parts out of reach of children.
- 5) If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning. To smoothen the process, kindly provide the invoice number, SO number and photo of damaged part or missing pieces to the handler.
- 6) Customer Service Hotline : +6 03 - 3392 6888. For further assembly instructions, please email us at info@versalink.com

IMPORTANT:
FUNCTION OF KLUX CAM



 Make Sure The Arrow Is Pointing
Upwards Before Inserting
Into The Panel's Hole

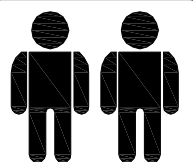

TWO PEOPLE ARE REQUIRED TO
ASSEMBLE AND MOVE THIS MODEL