Assembly Instructions

MODEL NO. BAX-EC-SD-120-70

DRWG NO. DRF-5510-18 V1

HARDWARE LIST

A	B	C	D	E	F	G	H
							
Allen Key M3 - 1PCS M4 - 1PCS	PHM Screw M6 x 16 8 PCS	SET Screw M6 x 16 12 PCS	SET Screw M8 x 20 4 PCS	S-JCBC-M8X25 4 PCS	S-JCBC-M6X16 4 PCS	ADJ-TOP-M6X25 1 PCS	BEAM CAP 2 PCS

TOOLS REQUIRED


Hand Drill


Screwdriver

STEP1

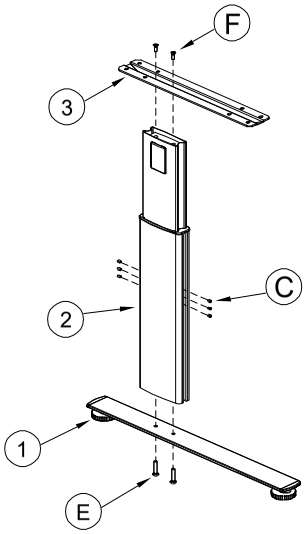

STEP2

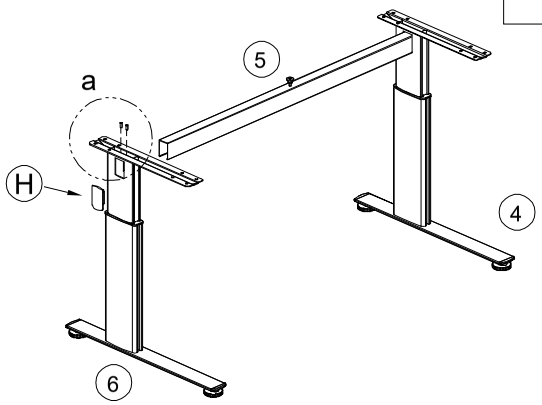

STEP3

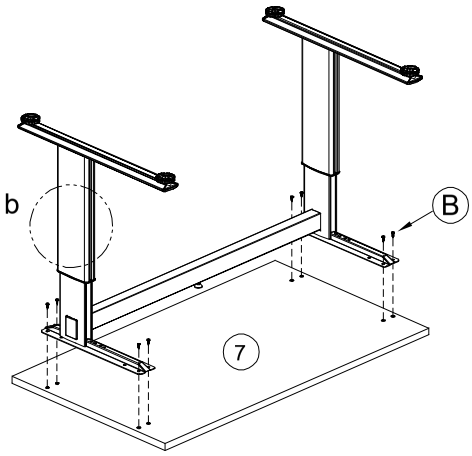

STEP4

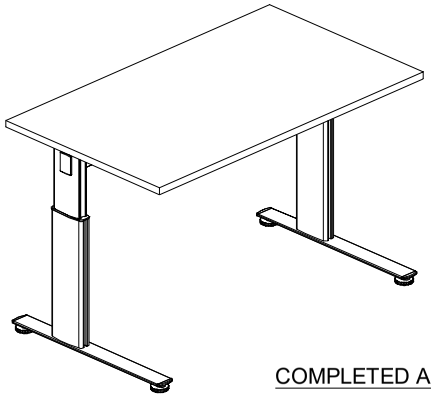

COMPLETED ASSEMBLY

Insert the BEAM and fix it with the two screws on the above

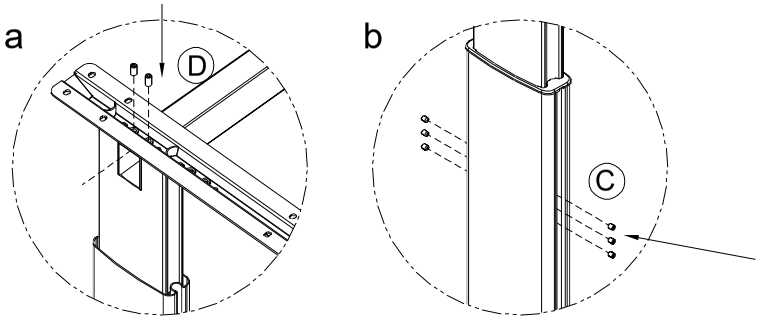

Here you can adjust the height to suit you

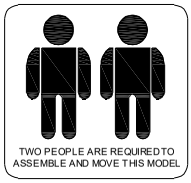

IMPORTANT NOTE:

1. Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
2. Check to be sure that you have all parts and hardware.
3. Remove all wrapping materials, including staples & packing straps before you start to assemble.
4. Keep all hardware parts out of reach of children.
5. If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline
6. before returning. To smoothen the process, kindly provide the invoice number, SO number and photo of damaged part or missing pieces to the handler.
7. Customer Service Hotline : +6 03 - 3392 6888. For further assembly instructions, please email us at info@versalink.com