Assembly Instructions

REV-1

MODEL NO. LEX-EC-SR090-60DL
LEX-EC-SR100-60DL

HARDWARE LIST

A	B	C	D	E	F	G
Set Screw M8 x 45 2 PCS	Solo Rectangular Beam Reinforcement A 1 PCS	PHM Screw M6 x 16 4 PCS	Set Screw M8 x 45 2 PCS	 Solo Rectangular Beam Reinforcement A 1 PC	 Pan Head Self Tapping Screw #8 x 5/8" -1 PC Solo T-Juction Joint-1 PC	4 Hole Bracket 80 x 60 x 3 mm -2 PCS PHM Screw M6 x 16- 4 PCS Pan Head Self Tapping Screw #8 x 5/8" -4 PCS
*Hardware from Lex End Cross Beam			*Hardware from Rectangular Beam			

TOOLS REQUIRED

Hand Drill


Allen Key 4mm

STEP 1

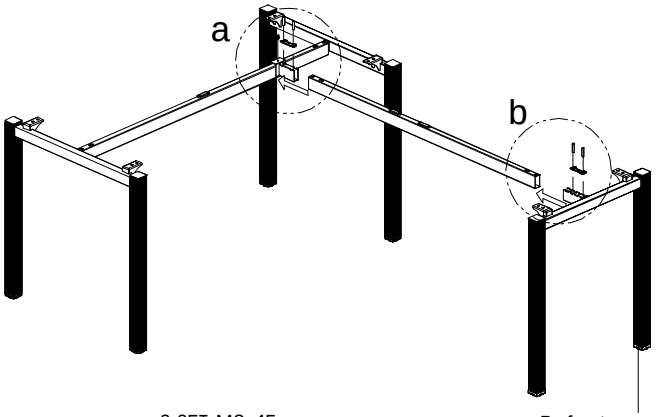

Refer to assembly instruction Lex End Leg

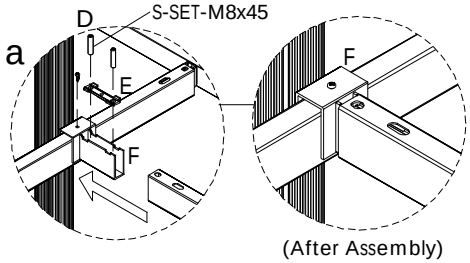

(After Assembly)

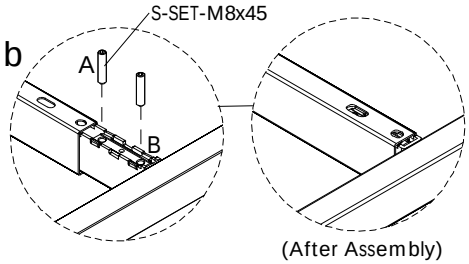

(After Assembly)

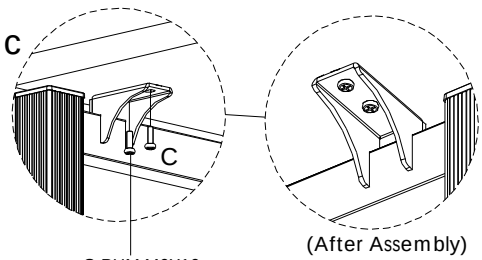

(After Assembly)

STEP 2

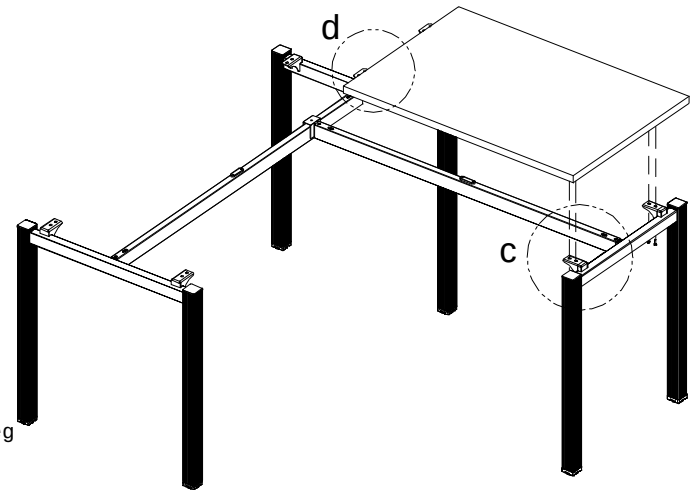

COMPLETED ASSEMBLY

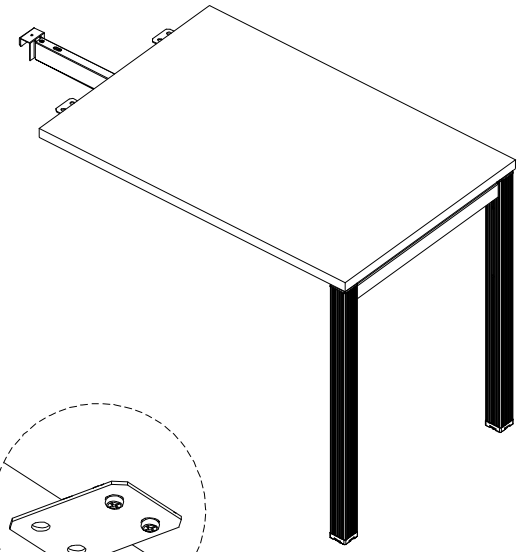

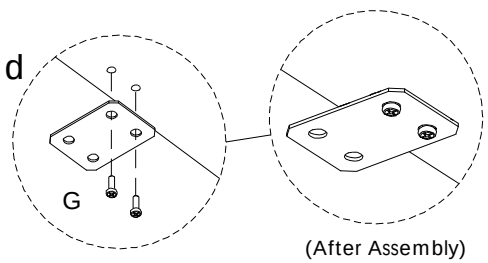

(After Assembly)

IMPORTANT NOTE:
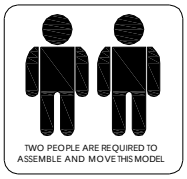
1)Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
2)Check to be sure that you have all parts and hardware.
3)Remove all wrapping materials, including staples & packing straps before you start to assemble.
4)Keep all hardware parts out of reach of children.
5)If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning. To smoothen the process, kindly provide the invoice number, SO number and photo of damaged part or missing pieces to the handler.
6)Customer Service Hotline : +6 03 - 3392 6888. For further assembly instructions, please email us at info@versalink.com